
Operation Manual

Celeb 250/450/450Q

LED DMX



KINO FLO
Lighting Systems

Celeb LED DMX Systems

Center Mount



CEL-250CU Celeb 250 LED DMX Center, Univ

CEL-450CU Celeb 450 LED DMX Center, Univ

Yoke Mount



CEL-250YU Celeb 250 LED DMX Yoke, Univ

CEL-450YU Celeb 450 LED DMX Yoke, Univ

CEL-450QU Celeb 450Q LED DMX Yoke, Univ

Pole-Op



CEL-250PU Celeb 250 LED DMX Pole-Op, Univ

CEL-450PU Celeb 450 LED DMX Pole-Op, Univ

CEL-450QPU Celeb 450Q LED DMX Pole-Op Univ

Included w/ all Celeb Models



LVR-CE290-P Celeb 250 Louver/HP, 90°

LVR-CE490-P Celeb 450 Louver/HP, 90°

LVR-CE490-QP Celeb 450Q Louver/HP, 90°

Celeb 250 LED DMX Kits



**Celeb 250 LED
DMX Center Kit**

KIT-C250U

Celeb 250 LED DMX Center Mount Kit, Univ

Kit Contents:

1 Celeb 250 LED DMX Center Mount
1 Flight Case

Weight: 31 lb (14kg)

Dimensions: 29 x 10.5 x 17" (74 x 27 x 43cm)



**Celeb 250 LED
DMX Yoke Kit**

KIT-C250YU

Celeb 250 LED DMX Yoke Mount Kit, Univ

Kit Contents:

1 Celeb 250 LED DMX Yoke Mount
1 Jr. Pin
1 Ship Case

Weight: 40 lb (18kg)

Dimensions: 32.5 x 8.5 x 24" (83 x 22 x 61cm)

Celeb 450 LED DMX Kits



**Celeb 450 LED
DMX Center Kit**

KIT-C450U

Celeb 450 LED DMX Center Mount Kit, Univ

Kit Contents:

1 Celeb 450 LED DMX Center Mount
1 Flight Case

Weight: 52.5 lb (24kg)

Dimensions: 53.5 x 11 x 16.5" (136 x 28 x 42cm)



**Celeb 450 LED
DMX Yoke Kit**

KIT-C450YU

Celeb 450 LED DMX Yoke Mount Kit, Univ

Kit Contents:

1 Celeb 450 LED DMX Yoke Mount
1 Jr. Pin
1 Ship Case

Weight: 57 lb (26kg)

Dimensions: 54.5 x 9.5 x 25" (138.5 x 24 x 63.5cm)

Celeb 450Q LED DMX Kit



**Celeb 450Q LED
DMX Yoke Kit**

KIT-C450QU

Celeb 450Q LED DMX Yoke Mount Kit, Univ

Kit Contents:

1 Celeb 450Q LED DMX Yoke Mount
1 Jr. Pin
1 Ship Case

Weight: 52 lb (24kg)

Dimensions: 34.5 x 8.5 x 33" (88 x 22 x 84cm)

Center Mount



MTP-LBC



Mounted on a baby stand



Mounted to pipe grid

The **Celeb 250 Center Mount** fixture includes a Lollipop w/ Baby Receiver (16mm) (**MTP-LBC**) which allows the fixture to be mounted directly onto a baby stand or hung from a grid with a baby pipe clamp.

Note: The handles on the back of the fixture provide an attachment point for a safety chain.



Turn the knob to loosen or tighten the orientation of the mount.



MTP-LM



Mounted to pipe grid



The **Celeb 450 Center Mount** fixture includes a Lollipop w/ Junior Pin (28mm) (**MTP-LM**) which allows the fixture to be mounted directly onto a junior stand or hung from a grid with a junior pipe clamp.

A 180° turn loosens the orientation of the mount. A right turn tightens the mount. The tension on the lock lever may be adjusted by pulling the handle away from the mount. This disengages the handle from the screw mechanism and allows the lever to be reoriented. You can also use a screwdriver to adjust the tension. Pull back on handle and adjust screw.

Baby Offset Arm



MTP-B41F Kino Offset
w/ Baby Receiver
(16mm)



The Kino Offset w/ Baby Receiver (**MTP-B41F**) allows the **Celeb 250 Center Mount** to mount on the center of a stand or it can also be under slung from a baby stand to use as an up light. It cannot be used with the Celeb 450 due to weight capacity.

Yoke Mount



MTP-I40



MTP-I80

The yoke has a 1/2" hole to accept industry standard mounting hardware.

The **Celeb 250 Yoke Mount** fixture can hang from a grid by a baby pipe hanger using a Baby Receiver Assembly for Yoke (**MTP-I40**), sold separately or a junior pipe hanger using a Junior Pin Assembly for Yoke (**MTP-I80**), also sold separately. The **Celeb 450 Yoke Mount** and **Celeb 450Q Yoke Mount** can also hang by a junior pipe hanger with the **MTP-I80**.

Warning: Use only M5 X 10mm screws (supplied) to assemble yoke. Note that threads on the fixture are self-locking and may seem tight. Replacement screws: Part No. **2020127**

Recommended torque setting:

USA: 18 lb-in

Metric: 2 Nm

Pole-Op



The Pole-Op fixtures include a yoke with an attached junior pin. They can be hung from a grid with a Junior pipe hanger.



Junior pin attached to Pole-Op Yoke

Operating Pole-Op



The **Blue** cup alters the **Pan** (left or right).

The **White** cup alters the **Tilt** (up or down).



Warning! Do not pull yoke to adjust tilt. Turn the white knob counter clockwise to angle the yoke 90°. (ParaBeam shown for illustration purposes only.)

Mount Options



Rope Hang

Accessory holders are also designed to enable 4-point rope hangs for specialty rigging applications.



The Celeb Support w/ Pin (**MTP-CE**) can be used with the Celeb 250 as additional mount points, for example, car rigs, etc.

MTP-CE

Inserting Louver



The Celeb includes spring loaded accessory holders to hold the Honeycomb Louver.

Place the long edge of the Honeycomb Louver into the lower channel.

Press down on the left and right corners of the Louver and slip the upper edge into the upper channel of the fixture. To remove, reverse the procedure.

Note: Do not press down along the top center portion of the Louver. Doing so may deform the Louver over repeated usage.

SnapBag & SnapGrid



The SnapBag accessory is a lightweight fabric tailor-made for the Celeb LED. It slips over the fixture and is attached with straps. The reflective material intensifies the soft light. The removable Magic cloth or Grid cloth attaches to the inside with Velcro.



The SnapGrid accessory is constructed of pre-stretched fireproof fabric with a built-in stainless steel frame. It unfolds and snaps into place. This model requires the use with the corresponding SnapBag; it is not designed to be used by itself.

Inserting Barndoors



BRD-CE2

Position the barndoors alongside the extruded edge of the fixture. Align the thumbscrews with the adjustable receptacle holes in the fixture and insert into place. Lock the barndoors by turning the silver thumbscrew.

To remove, reverse the procedure.

For replacement screws, use M5 Metric size screws.

Note: To adjust the placement of the receptacle holes, use a pointed tool (such as a pen) to slide the holes within the extruded edge.

Fixture Power



AC Input

The Celeb is powered AC and includes an IEC connection. A locking power cord is included with the fixture. To remove the plug, move the red tab to release. The fixture has a built-in power supply with universal input from 100-240VAC.

Note: The Celeb 250 is shown for example purposes only. The IEC power cords for the Celeb 450 and 450Q are in a different location.



DC Input

The Celeb 250 can also be operated on 24VDC (input range 18-36VDC) through a 3-Pin XLR. A low voltage warning will display "**LPWR**" when the battery is running low.

The pin polarity is:
Pin #1 – Ground
Pin #2 + 18-36VDC
Pin #3 not used

Ambient Operating Temperature

The Celeb is designed to operate at temperatures from 14°F to 104°F (-10°C to 40°C).

Control Panel - White Mode



- A) On /Off:** **On** = Green light displayed. **Off** = Red light displayed. The display and all menu settings can be operated while the power button is in the Off position, as long as power is applied to the controller. The On /Off button only controls the light source.
- B) Menu:** Provides access to menu options such as General settings, Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).
- C) Preset Buttons:** Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin and G/M settings.
- D) Display:** Provides access to Dim, Kelvin, G/M, and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.
- E) Lock:** Press the **Lock** button to disable all buttons and Control knob. Press for 3 seconds to restore displayed presets to default factory settings.
- F) Mode:** Press to navigate from Dim to Kelvin and G/M settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.
- G) Data Port:** Mini B USB for firmware updates.
- H) Control Knob:** Manually adjusts Dim, Kelvin, G/M levels and DMX address. Press the Control knob to toggle between **Fine** and **Coarse** increments or when selecting options within menus.

DMX Note: Each LED Fixture has an **"AUTO TERMINATE"** feature. The last fixture that does not have an XLR cable attached to the DMX "Out" port will automatically terminate.

Control Panel - Gels/Hue Mode



Gels/Hue Mode

A) Menu:

Provides access to menu options such as General settings (**Gels/Hue Mode**), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, Gel, Hue and Saturation settings.


C) Display:

Provides access to Dim, Kelvin, G/M, Gel, Hue/Saturation and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

D) Mode:

Press to navigate from Dim to Kelvin, G/M, Gel, Hue and Saturation settings. When on the Gel function, pushing the Control knob in/out will apply the gel or remove the gel. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut Tip: Long press will bring you back one step.

Control Panel - RGB Mode

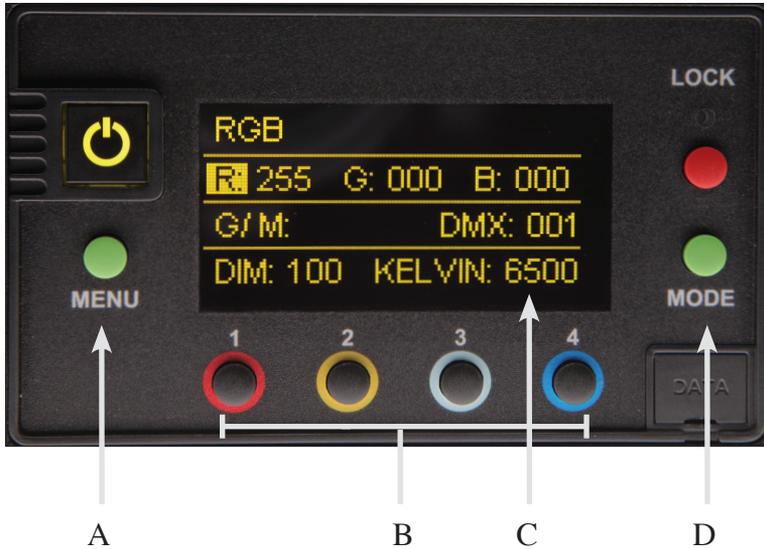

RGB Mode

A) Menu:

Provides access to menu options such as General settings (**RGB Mode**), Reset, DMX and DMX Wireless settings. Shortcut: While on control screen, press and hold for 3 seconds to switch through menus (**White, Gels & Hue, RGB, FX**).

B) Preset Buttons:

Factory defaults left to right are: 2700K, 3200K, 5000K and 6500K. G/M default value is 000. User can also use these preset buttons to store custom Kelvin between 2500K and 9900K and custom G/M, and RGB settings.


C) Display:

Provides access to Dim, Kelvin, G/M, RGB and DMX channel. Factory reset will show: Dim = 10%, Kelvin = 2700K, G/M = 000, DMX = 001.

D) Mode:

Press to navigate from Dim to Kelvin, G/M, RGB settings. When in sub-menus, pressing Mode always returns you to main display. When DMX is applied, use Mode to access DMX channel on main display. Shortcut: Long press will bring you back one step.

Control Panel - FX (Effects)

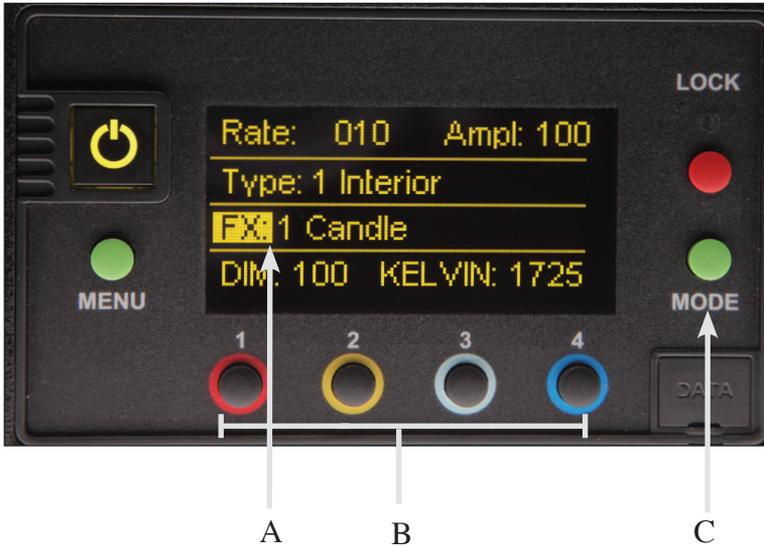

FX (Effects) Mode

FX mode provides access to effects including Candle, Fire, TV, Police, Lightning, Paparazzi, Pulse and Scroll. Candle mode used as an example:

A) FX Option:

Choose the desired FX Mode by rotating the control knob. When on the desired effect, there will be several pre-programmed effects as well as control parameters that can be altered.

B) Preset Buttons:

In FX Mode, **Kelvin** custom settings and any control functions displayed such as **Rate** and **Amplitude (Ampl)** can be saved as a preset. Chosen values can be assigned to any preset button by holding down the desired button for 3 seconds. The Kelvin display will flash once the setting is registered.

To restore presets to default factory settings, choose **Reset** under **General** settings and Clear Presets. This method will reset all buttons in all Modes. Shortcut: If only want to clear presets for **Candle** Mode, hold **Lock** button for 3 seconds while Candle mode is displayed.

C) Mode:

Press to navigate from Dim to Kelvin and FX settings. Shortcut: Long press will bring you back one step.

Accessories




BRD-CE2 Celeb 250 Barndoors (Set of 4)
BRD-CE4 Celeb 450 Barndoors (Set of 4)
BRD-CE4-Q Celeb 450Q Barndoors (Set of 4)



DFS-CE200-S Celeb 250 SnapBag w 2 x Diffusion
DFS-CE400-S Celeb 450 SnapBag w 2 x Diffusion
DFS-CE400Q-S Celeb 450Q SnapBag w 2 x Diffusion



LVR-FS240-S Celeb 250 SnapGrid, 40°
LVR-CE440-S Celeb 450 SnapGrid, 40°
LVR-CE440Q-S Celeb 450Q SnapGrid, 40°

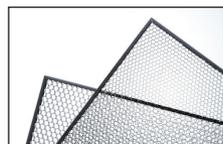

LVR-CE290-P Celeb 250 Louver/HP 90°
LVR-CE260-P Celeb 250 Louver/HP 60°
LVR-CE490-P Celeb 450 Louver/HP 90°
LVR-CE460-P Celeb 450 Louver/HP 60°
LVR-CE490-QP Celeb 450Q Louver/HP 90°
LVR-CE460-QP Celeb 450Q Louver/HP 60°



Lollipops are interchangeable. (For Celeb 250)

MTP-L Kino 41 Lollipop w/ 3/8" Pin (10mm)
MTP-LBC Kino 41 Lollipop w/ Baby Receiver Curve (16mm)
MTP-LBS Kino 41 Lollipop w/ Baby Receiver Short (16mm)



MTP-B41F Kino Offset w/ Baby Receiver (16mm)
 (For Celeb 250)



MTP-CE Celeb Support w/ Pin (For Celeb 250)



MTP-I80 Junior Pin Assembly for Yoke (28mm)



MTP-I40 Baby Receiver Assembly for Yoke (16mm)



KAS-CE2 Celeb 250 Flight Case
KAS-CE2-C Celeb 250 Travel Case
KAS-CE4 Celeb 450 Flight Case
KAS-CE4-C Celeb 450 Travel Case



KAS-CE2-Y Celeb 250 Yoke Ship Case
KAS-CE4-Y Celeb 450 Yoke Ship Case
KAS-CE4-Q Celeb 450Q Yoke Ship Case



STD-M30 Medium Duty Stand/Black, 30"
STD-M36 Medium Duty Stand/Black, 36"



7010032 Celeb 250 Yoke Assembly
7010045 Celeb 450 Yoke Assembly
7010048 Celeb 450Q Yoke Assembly



7010038 Celeb 250 Pole-Op Assembly
7010046 Celeb 450 Pole-Op Assembly
7010049 Celeb 450Q Pole-Op Assembly

Fixture Specifications



**Celeb 250 LED
DMX Center**

CEL-250CU Celeb 250 LED DMX Center Mount, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 145W

Amperage VAC: 1.2A at 120VAC, 0.7A at 230VAC

DC Input Voltage: 18~36VDC, 150W

Amperage VDC: 6.25A at 24VDC

Kelvin Range: 2700K~6500K (White Mode)
2500K~9900K (Color Mode)

Dimming Range: 100%~1%

Weight: 15 lb (6.8kg)

Dimensions: 24 x 5 x 14"
(61 x 12.7 x 35.5cm)



**Celeb 250 LED
DMX Yoke**

CEL-250YU Celeb 250 LED DMX Yoke Mount, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 145W

Amperage VAC: 1.2A at 120VAC, 0.7A at 230VAC

DC Input Voltage: 18~36VDC, 150W

Amperage VDC: 6.25A at 24VDC

Kelvin Range: 2700K~6500K (White Mode)
2500K~9900K (Color Mode)

Dimming Range: 100%~1%

Weight: 16 lb (7.3kg)

Dimensions: 28.5 x 5 x 16.5"
(72.3 x 12.7 x 42cm)



**Celeb 250 LED
DMX Pole-Op**

CEL-250PU Celeb 250 LED DMX Pole-Op, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 145W

Amperage VAC: 1.2A at 120VAC, 0.7A at 230VAC

DC Input Voltage: 18~36VDC, 150W

Amperage VDC: 6.25A at 24VDC

Kelvin Range: 2700K~6500K (White Mode)
2500K~9900K (Color Mode)

Dimming Range: 100%~1%

Weight: 17 lb (7.7kg)

Dimensions: 29 x 6 x 16.5"
(74 x 15.2 x 42cm)



**Celeb 450 LED
DMX Center**

CEL-450CU Celeb 450 LED DMX Center Mount, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 255W
Amperage VAC: 2.5A at 120VAC, 1.1A at 230VAC
Kelvin Range: 2700K~6500K (White Mode)
2500K~9900K (Color Mode)
Dimming Range: 100%~1%
Weight: 26 lb (12kg)
Dimensions: 45 x 5 x 14"
(114.5 x 13 x 36cm)



**Celeb 450 LED
DMX Yoke**

CEL-450YU Celeb 450 LED DMX Yoke Mount, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 255W
Amperage VAC: 2.5A at 120VAC, 1.1A at 230VAC
Kelvin Range: 2700K~6500K (White Mode)
2500K~9900K (Color Mode)
Dimming Range: 100%~1%
Weight: 26 lb (12kg)
Dimensions: 50 x 5 x 16.5"
(127 x 13 x 42cm)



**Celeb 450 LED
DMX Pole-Op**

CEL-450PU Celeb 450 LED DMX Pole-Op, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 255W
Amperage VAC: 2.5A at 120VAC, 1.1A at 230VAC
Kelvin Range: 2700K~6500K (White Mode)
2500K~9900K (Color Mode)
Dimming Range: 100%~1%
Weight: 26 lb (12kg)
Dimensions: 29 x 6 x 16.5"
(128.5 x 13 x 42cm)



**Celeb 450Q LED
DMX Yoke**

CEL-450QU Celeb 450Q LED DMX Yoke Mount, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 270W

Amperage VAC: 2.7A at 120VAC, 1.1A at 230VAC

Kelvin Range: 2700K~6500K (White Mode)

2500K~9900K (Color Mode)

Dimming Range: 100%~1%

Weight: 24 lb (11kg)

Dimensions: 30 x 5 x 26"

(72 x 13 x 66cm)



**Celeb 450Q LED
DMX Pole-Op**

CEL-450QPU Celeb 450Q LED DMX Pole-Op, Univ

AC Input Voltage: 100~240VAC 50/60Hz, 270W

Amperage VAC: 2.7A at 120VAC, 1.1A at 230VAC

Kelvin Range: 2700K~6500K (White Mode)

2500K~9900K (Color Mode)

Dimming Range: 100%~1%

Weight: 26 lb (12kg)

Dimensions: 30 x 5 x 30.5"

(76 x 13 x 77.5cm)

FCC Part 15 Verification:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

FCC Part 15 Declaration of Conformity:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



KINO FLO, INC
Celeb 250 LED, Celeb 450 LED, Celeb 450Q LED
ID: XRSCRMXTIMO101
IC: 8879A-CRMXT101

For full operation manual, latest Warranty information and Certifications,
see Kino Flo website at www.kinoflo.com.



Environmental: Disposal of Old Electrical & Electronic Equipment.



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. This product is made of recyclable materials and should be disposed of in accordance with governmental regulations.

Kino Flo, Inc. 2840 N. Hollywood Way, Burbank, CA 91505, USA
Tel: 818 767-6528 website: www.kinoflo.com